


Electrical Interface – Wiring Quick Start Rev. 1

1


Electrical supply 9V to 36V (24V typical)

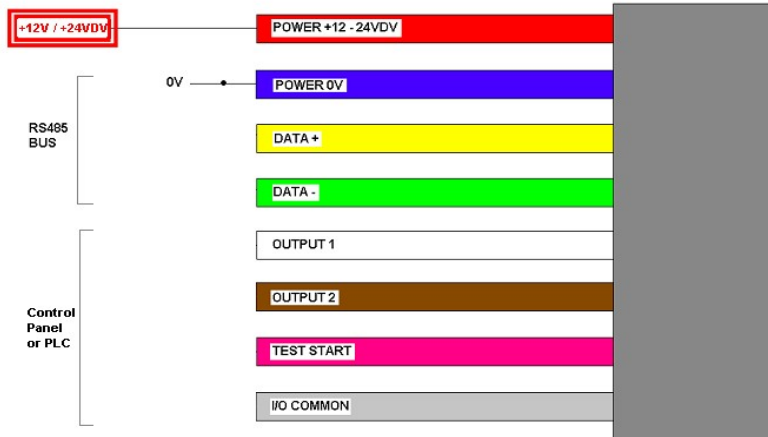

6

Plug the control cable from your USBi into the ICM power connection port.


For hardwired or PLC controlled applications, refer to the full user manual for instruction, then go to STEP 8.



7

If you are using an MP Filtri USBi, connect to your laptop using the USB cable.

A permanent DC supply may also be connected.

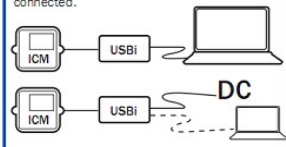


Caution: Ensure that power is connected to the RED wire only to avoid damaging product

*For full product, software and installation instruction please see the ICM user manual. As a policy of continual improvement, MP Filtri reserve the right to alter specifications without prior notice. Except as permitted by such license, no part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or means electronic, mechanical, recording or otherwise, without prior written permission of MP Filtri UK Ltd.